

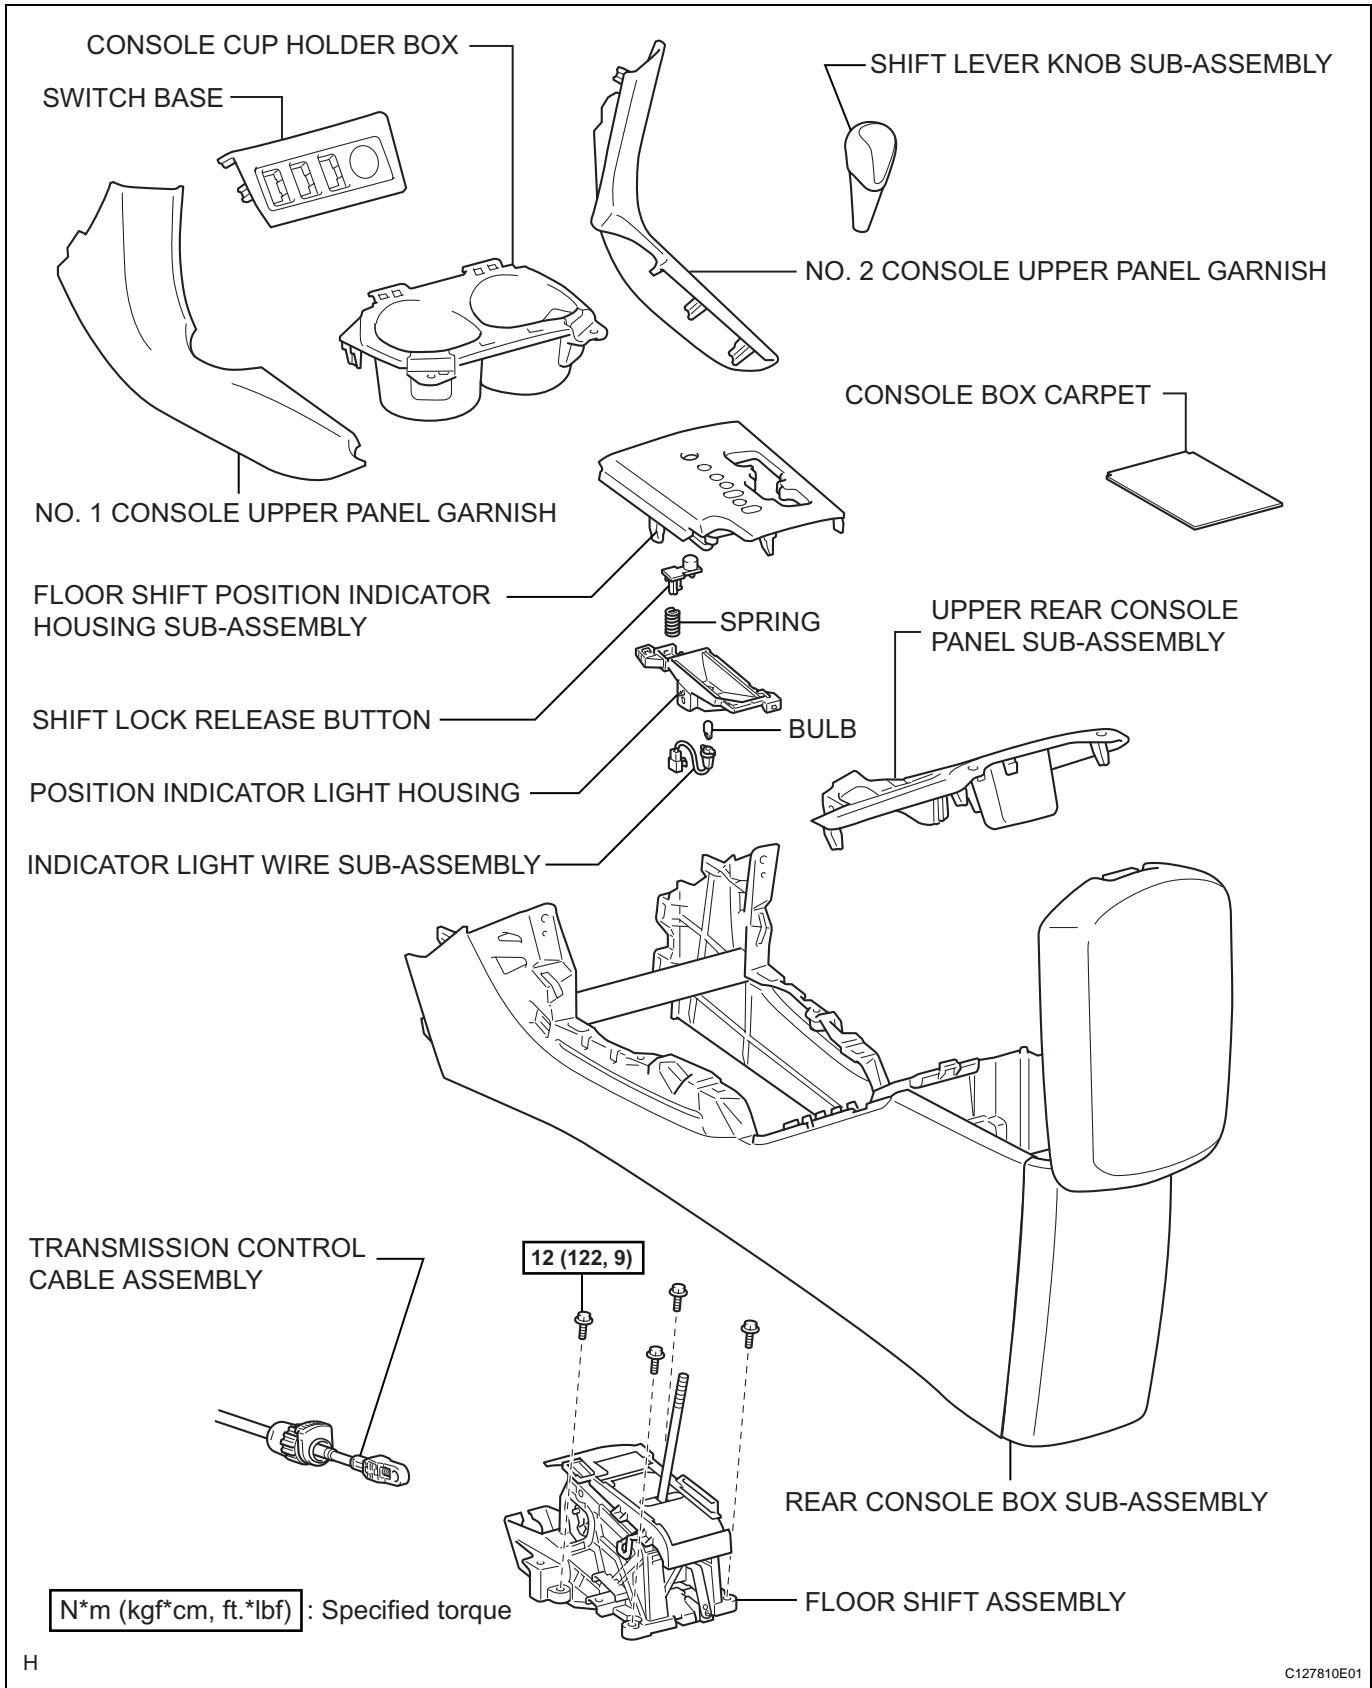


FLOOR SHIFT ASSEMBLY

COMPONENTS

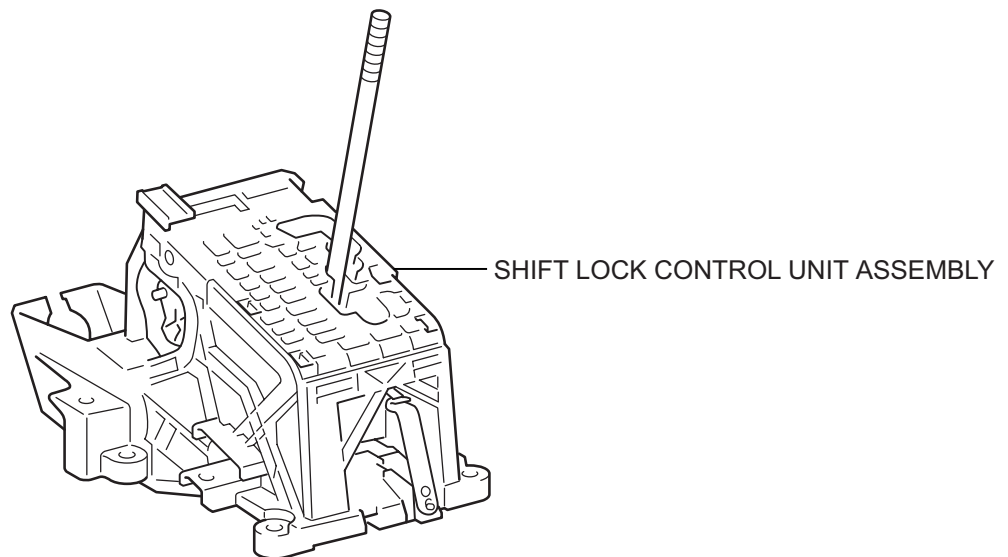

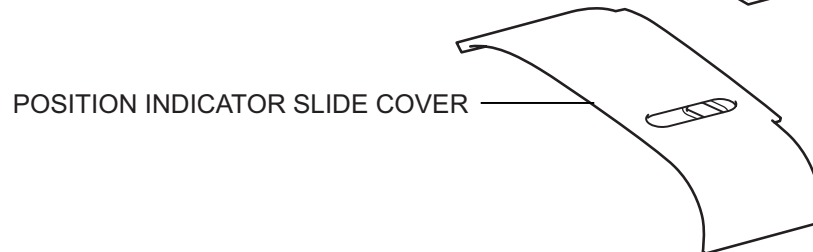

REMOVAL



1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE SHIFT LEVER KNOB SUB-ASSEMBLY**
3. **REMOVE REAR CONSOLE BOX SUB-ASSEMBLY**
(a) Remove the console box (see page [IP-26](#)).
4. **DISCONNECT TRANSMISSION CONTROL CABLE ASSEMBLY**


(a) Disconnect the control cable from the shift lever.

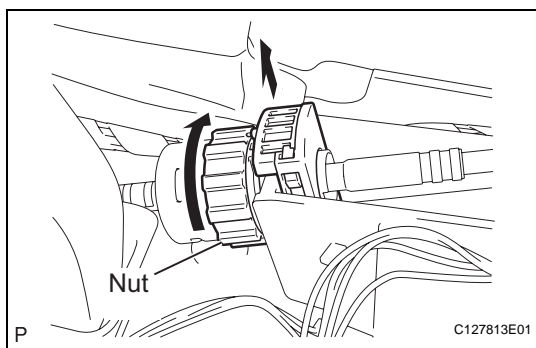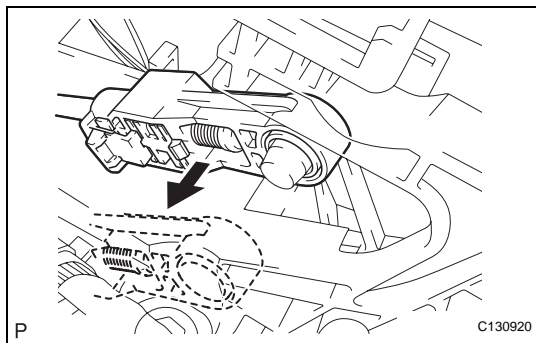


(b) Turn the nut and disconnect the control cable from the shift lever retainer.

5. **REMOVE FLOOR SHIFT ASSEMBLY**

(a) Remove the 4 bolts and floor shift.

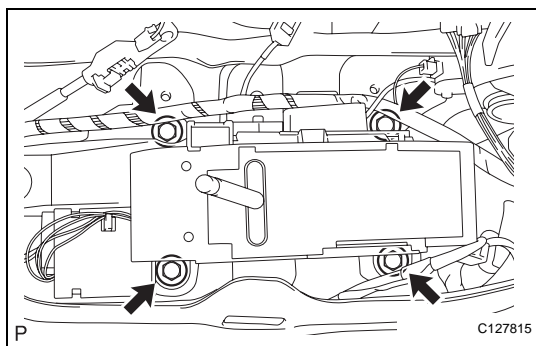


- (b) Disconnect the 2 connectors and detach the clamp.

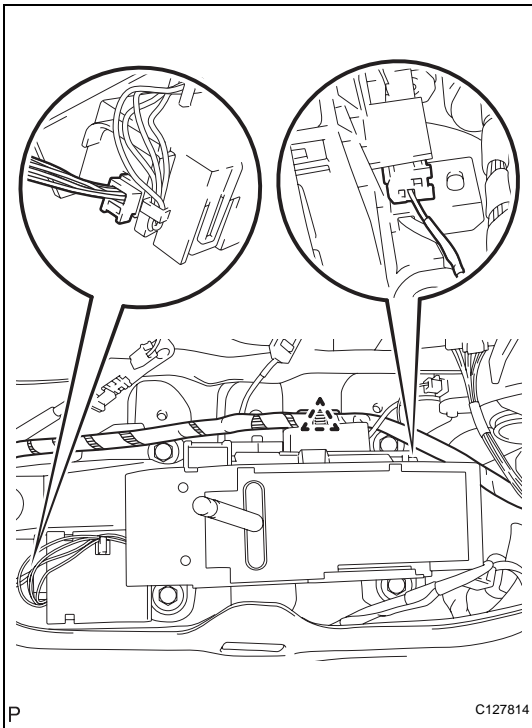

DISASSEMBLY

1. REMOVE LOWER POSITION INDICATOR HOUSING


- (a) Detach the 4 claws and remove the housing.
- (b) Remove the position indicator slide cover with slide No. 2 cover.

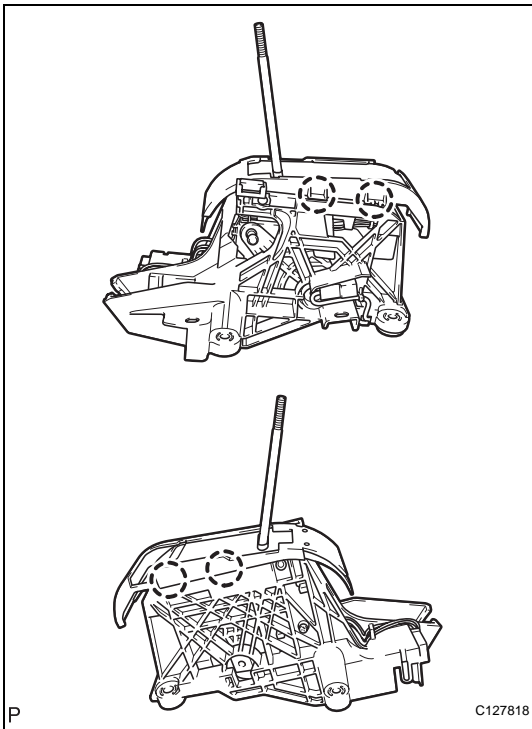


2. REMOVE POSITION INDICATOR LIGHT HOUSING

- (a) Detach the 2 claws and remove the indicator light housing from the floor shift position indicator housing.

3. REMOVE INDICATOR LIGHT WIRE SUB-ASSEMBLY

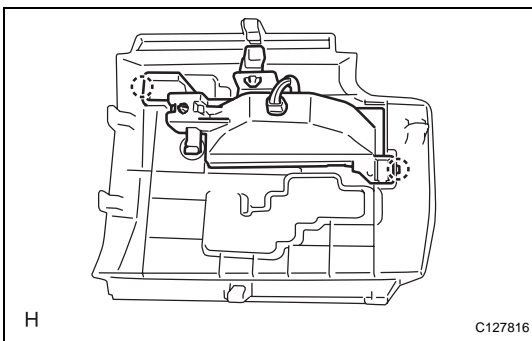

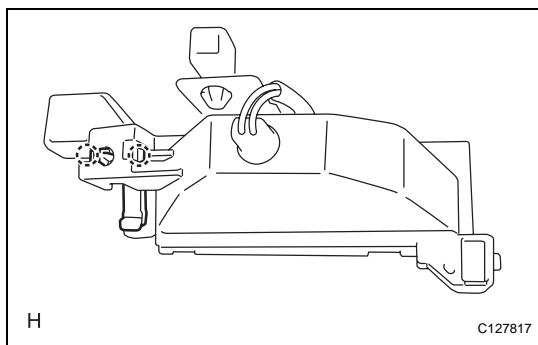**4. REMOVE SHIFT LOCK RELEASE BUTTON**

- (a) Detach the 2 claws and remove the button and spring from the position indicator light housing.

ADJUSTMENT




1. INSPECT SHIFT LEVER POSITION

- (a) When shifting the lever from P to the R position with the ignition switch ON and the brake pedal depressed, make sure that the shift lever moves smoothly and moves correctly into position.
- (b) Start the engine and make sure that the vehicle moves forward when shifting the lever from N to the D position and moves rearward when shifting the lever to the R position.

If the operation cannot be performed as specified, inspect the park/neutral position switch assembly and check the shift lever assembly installation condition.

2. ADJUST SHIFT LEVER POSITION

- (a) Shift the shift lever to the N position.
- (b) Slide the adjuster case cover in the direction shown in the illustration and pull out the lock piece.
- (c) Gently pull the cable rod toward the rear of the vehicle by hand to pull the cable taut.

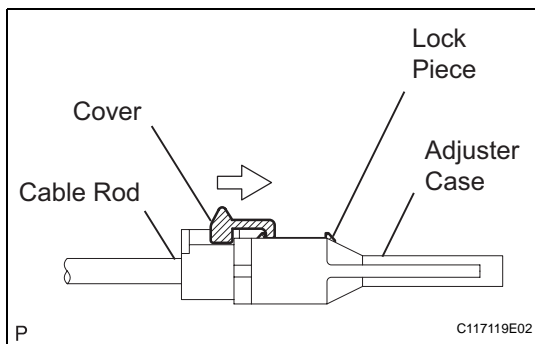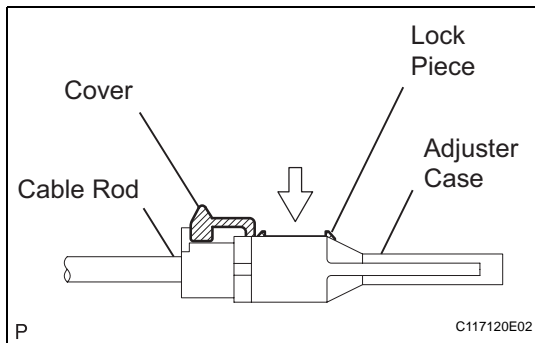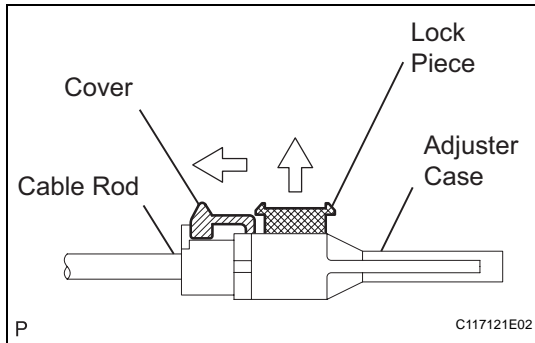

- (d) Press the lock piece into the adjuster case and lock it.

- (e) Slide the cover in the direction shown in the illustration.

NOTICE:

Slide the cover past the protrusion of the lock piece.


- (f) Inspect the operation.

REASSEMBLY

1. INSTALL SHIFT LOCK RELEASE BUTTON


- (a) Install the spring and button and attach the claws to the position indicator light housing.

2. INSTALL INDICATOR LIGHT WIRE SUB-ASSEMBLY

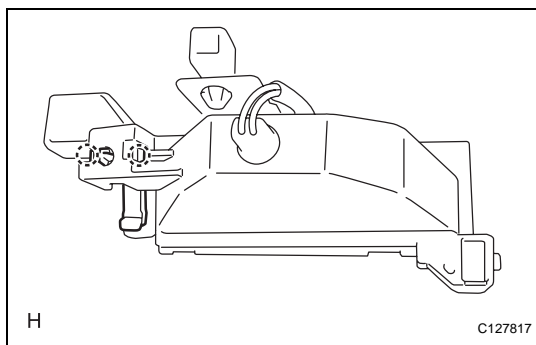


3. INSTALL POSITION INDICATOR LIGHT HOUSING

- (a) Install the indicator light housing and attach the 2 claws to the shift position indicator housing.

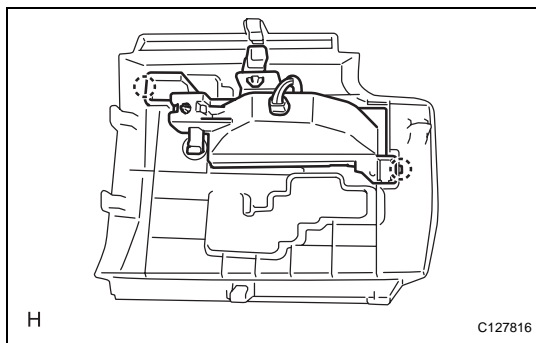

4. INSTALL LOWER POSITION INDICATOR HOUSING

- (a) Install the position indicator slide cover with slide No. 2 cover to the indicator housing.
- (b) Install the housing and attach the 4 claws to the floor shift assembly.

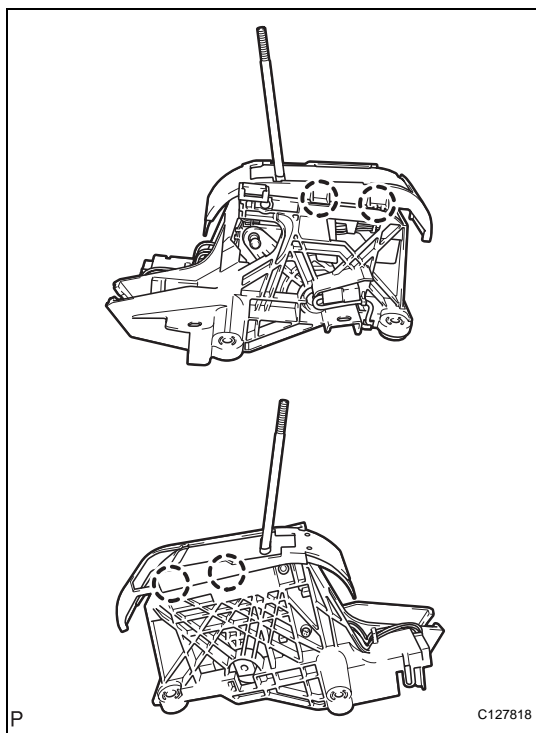


INSTALLATION

1. INSTALL FLOOR SHIFT ASSEMBLY


- Connect the 2 connectors and attach the clamp.
- Install the floor shift with the 4 bolts.

Torque: 12 N*m (122 kgf*cm, 9 ft.*lbf)

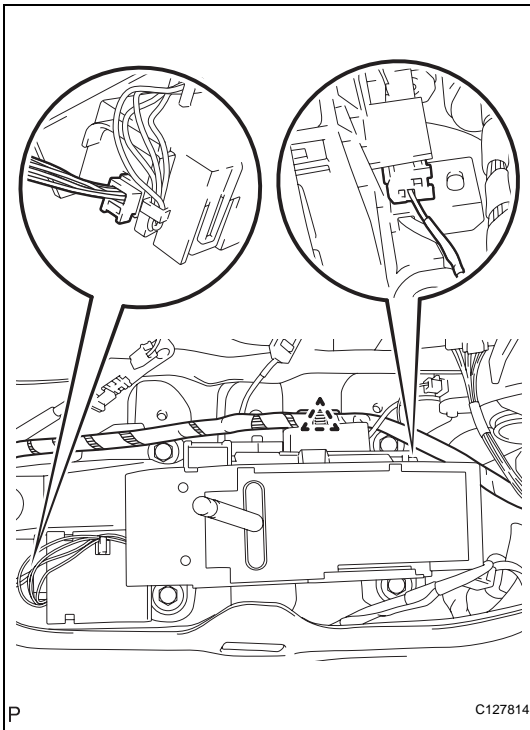

2. CONNECT TRANSMISSION CONTROL CABLE ASSEMBLY


- Turn the nut of the control cable and push in the lock.

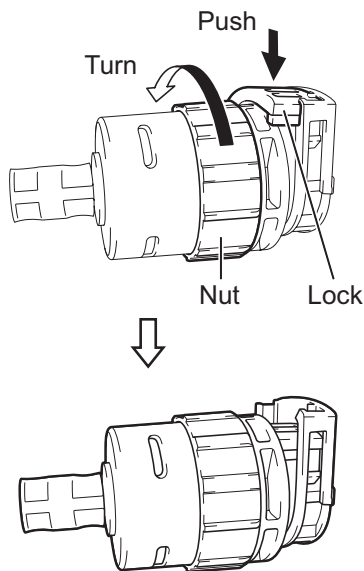


- Install the control cable onto the shift lever retainer.


NOTICE:

- Install the cable with the protruding portion of the cable outer facing upward.

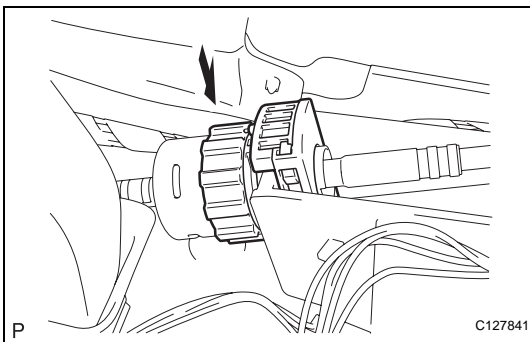

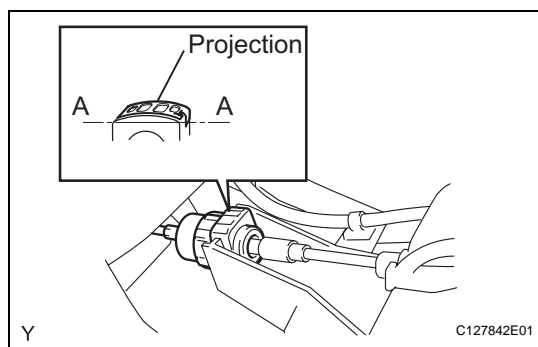

- After installing, check that the lock of the cable outer is protruding beyond portion A-A, as shown in the illustration.

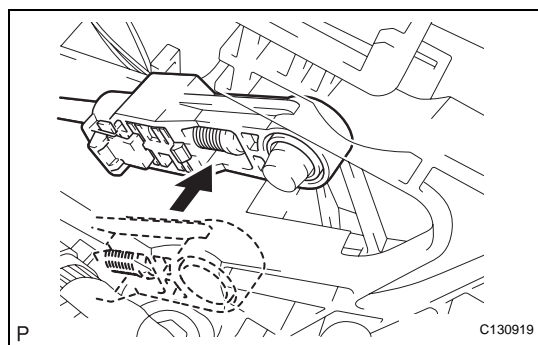

- (c) Connect the control cable to the shift lever.

NOTICE:

Connect the control cable so that the adjusting mechanism lock of the control cable is installed on the driver side of the vehicle.

3. **CONNECT CABLE TO NEGATIVE BATTERY TERMINAL**
4. **INSPECT SHIFT LEVER POSITION** (See page [AX-164](#))
5. **ADJUST SHIFT LEVER POSITION** (See page [AX-164](#))
6. **INSTALL REAR CONSOLE BOX SUB-ASSEMBLY**
 - (a) Install the rear console box (see page [IP-28](#)).
7. **INSTALL SHIFT LEVER KNOB SUB-ASSEMBLY**